



Originale	Sostituto
	Power
	+ Shift + Power
	1
	4
	7
	8
	2
	5
	6
	3
	0
	+ Shift + Mute / Dimmer
	Sleep / Timer
	CH+ / Page+
	Vol+
	CH- / Page-
	Vol-

Originale	Sostituto
	Sound / Title
	Up
	Mute / Dimmer
	Left
	OK
	Right
	Back / Return
	Down
	Setup / OPT /
	Pause / Step / Freeze
	Play / Slow
	Stop / Hold
	<< / Tune-
	>> / Tune+
	I<< / Preset-
	>>I / Preset+
	Red / Netflix / Search





	Originale	Sostituto	Originale	Sostituto
	 Surround	 Eject / Surround		
	 Surround	 Green / APP / Repeat		
	 <	 Yellow / YouTube / Repeat		
	 >	 Blue / Prime Video / Random		
	 Test Tone	 Text / Goto		
	 CH Sel	 Smart / List		
	 Level-	 Shift + CH- /		
	 Level+	 Shift + CH+ /		
	 Display	 Display / Media		
	 L.Night/HDD	 D.Menu / Top		
	 Cine FLTR/DVD	 Menu / Home		



 

 







Originale	Sostituto
 On	 Power
 Standby	 Shift + Power
 1	 1
 2	 2
 3	 3
 4	 4
 5	 5
 6	 6
 7	 7
 8	 8
 9	 9
 +10	 Guide / EPG / -/--
 0	 0
 CLR	 Exit / Cancel / Clear
 CH/Disc+	 CH+ / Page+
 CH/Disc-	 CH- / Page-
 Top Menu	 D.Menu / Top

Originale	Sostituto
 Up	 Up
 Muting/Previous Menu	 Menu / Home
 Muting/Previous Menu	 Mute / Dimmer
 Left	 Left
 Enter	 OK
 Right	 Right
 Return	 Back / Return
 Down	 Down
 Setup	 Setup / OPT /
 Pause	 Pause / Step / Freeze
 Play	 Play / Slow
 Stop	 Stop / Hold
 <<	 << / Tune-
 >>	 >> / Tune+
 I<<	 I<< / Preset-
 >>I	 >>I / Preset+
 Audio	 Audio / Lang I/II






Originale		Sostituto	
	Subtitle		Subtitle / EQ
	Random		Blue / Prime Video / Random
	Repeat		Green / APP / Repeat
	Display		Display / Media

Originale		Sostituto	





Originale	Sostituto
 On	 Power
 1	 1
 2	 2
 3	 3
 4	 4
 5	 5
 6	 6
 7	 7
 8	 8
 9	 9
 0	 0
 CH/Disc+	 CH+ / Page+
 CH/Disc-	 CH- / Page-
 Guide	 Guide / EPG / -/--
 Up	 Up
 Muting/Previous Menu	 Menu / Home
 Muting/Previous Menu	 Mute / Dimmer

Originale	Sostituto
 Left	 Left
 Enter	 OK
 Right	 Right
 Down	 Down
 Setup	 Setup / OPT /
 Pause	 Pause / Step / Freeze
 Play	 Play / Slow
 Stop	 Stop / Hold
 <<	 << / Tune-
 >>	 >> / Tune+
 On CD	 Shift + Power
 Standby CD	 Shift + Mute / Dimmer
 1 CD	 Shift + 1
 2 CD	 Shift + 2
 3 CD	 Shift + 3
 4 CD	 Shift + 4
 5 CD	 Shift + 5





Originale	Sostituto
6 CD	+ Shift + 6
7 CD	+ Shift + 7
8 CD	+ Shift + 8
9 CD	+ Shift + 9
+10 CD	+ Shift + Guide / EPG / -/-
0 CD	+ Shift + 0
CLR CD	+ Shift + Exit / Cancel / Clear
CH/Disc + CD	+ Shift + CH+ /
CH/Disc- CD	+ Shift + CH- /
Pause CD	+ Shift + Pause / Step /
Play CD	+ Shift + Play /
Stop CD	+ Shift + Stop /
<< CD	+ Shift + << /
>> CD	+ Shift + >> /
I<< CD	+ Shift + I<< / Preset-
>>I CD	+ Shift + >>I / Preset+
Random CD	+ Shift + Blue / Prime Video / Random

Originale	Sostituto
Repeat CD	+ Shift + Green / APP /
Display CD	+ Shift + Display / Media





Originale	Sostituto
	 Power
	 Shift + Power
	 1
	 2
	 3
	 4
	 5
	 6
	 7
	 8
	 9
	 0
	 CH+ / Page+
	 CH- / Page-
	 Up
	 Left
	 OK

Originale	Sostituto
	 Right
	 Down
	 Setup / OPT /
	 Pause / Step / Freeze
	 Play / Slow
	 Stop / Hold
	 << / Tune-
	 >> / Tune+

