



	Originale	Sostituto
	Power	Power
	1	1
	2	2
	3	3
	4	4
	5	5
	6	6
	7	7
	8	8
	9	9
	0	0
	Cancel	FAV PRE-CH
	Audio	SOUND DUAL
	Open/Close	ZOOM ▲
	Status	DISPLAY INFO
	Miracast	SEARCH TV/R
	Internet	SHIFT + APP MEDIA

	Originale	Sostituto
	<< Slow Search	◀◀
	Play	▶
	Slow Search >>	▶▶
	I<< Skip	◀◀
	Pause	⏸
	Skip >>I	▶▶
	Stop	■
	Pop-Up Menu	E-MANUAL D.MENU
	Exit	CLEAR EXIT
	Option	SETTINGS OPT
	Return	RETURN BACK
	Top Menu	TOP MENU MENU
	Netflix	APP MEDIA
	Home	HOME SMART
	Up	▲
	Down	▼
	Right/I>	▶





Originale	Sostituto
</Left	Left
OK	Ok
Red	Red
Green	Green
Yellow	Yellow
Blue	Blue
Power Tv	+ Shift + Power
AV Input Tv	AV
Vol+ Tv	Vol +
Vol- Tv	Vol -

Originale	Sostituto

