
 
 





Originale	Sostituto
 Power	 Power
 PREMIUM NET	 Smart
 Guida	 Guide
 Menu	 Menu
 Info	 Info
 Vol +	 Vol +
 Vol -	 Vol -
 P +	 Ch +
 P -	 Ch -
 Up	 Up
 Left	 Left
 OK	 Ok
 Right	 Right
 Down	 Down
 Red	 Red
 Green	 Green
 Yellow	 Yellow

Originale	Sostituto
 Blue	 Blue
 Back	 Back
 Exit / Stop	 Exit
 Exit / Stop	 Stop
 << REW	 <<
 >> FWD	 >>
 Pause / Play	 Play
 Pause / Play	 Pause
 1	 1
 2	 2
 3	 3
 4	 4
 5	 5
 6	 6
 7	 7
 8	 8
 9	 9





Originale		Sostituto	
	0		0
	Lista		List
	Opzioni		Options
	Text		Text
	TV / Rad		TV/R
	APP	 + 	Shift + Media
	Source		AV
	I<< Prev		I<<
	Rec		Rec
	File		Media
	>>I Next		>>I

Originale		Sostituto	

