







Originale	Sostituto
 Open / Close	 Eject / Surround
 Input Select	 AV / Input / RDS
 HDMI	 Shift + 0
 Power	 Power
 1	 1
 2	 2
 3	 3
 Prog +	 CH+ / Page+
 4	 4
 5	 5
 6	 6
 Prog -	 CH- / Page-
 7	 7
 8	 8
 9	 9
 Timer Prog	 Zoom / Size
 Setup	 Setup / OPT /

Originale	Sostituto
 0	 0
 Clear	 Exit / Cancel / Clear
 Info	 Info / Angle
 Text	 Text / Goto
 VCR	 Shift + 4
 DVD	 Shift + 2
 Guide	 Guide / EPG / -/-
 Top Menu	 Shift + D.Menu / Top Menu
 Up	 Up
 Disc Menu	 D.Menu / Top
 Left	 Left
 OK	 OK
 Right	 Right
 Display	 Display / Media
 Down	 Down
 Return	 Back / Return
 Red	 Red / Netflix / Search





Originale	Sostituto
 Green	 Green / APP / Repeat
 Yellow / Mode	 Yellow / YouTube / Repeat
 Blue / Search	 Blue / Prime Video / Random
 << REV	 << / Tune-
 Play	 Play / Slow
 >> FWD	 >> / Tune+
 I<< Skip	 I<< / Preset-
 Stop	 Stop / Hold
 >>I Skip	 >>I / Preset+
 Pause	 Pause / Step / Freeze
 Instant Skip	 +  Shift + Back / Return
 Sat Link	 TV/Radio /
 Time Slip	 +  Shift + Sleep / Timer
 Dubbing	 Smart / List
 Rec Mode	 +  Shift + Rec / Rec Mode
 Rec	 Rec / Rec Mode
 Subtitle	 Subtitle / EQ

Originale	Sostituto
 Audio	 Audio / Lang I/II
 Time Set	 Sleep / Timer

