




 



 














 



 

 

 











 





 
 
 
 


 
 



 







 



 

 

 













Originale		Sostituto		Originale		Sostituto	
	Power		Power		Vol-		Vol-
	TV		TV/Radio /		Source		AV / Input / RDS
	1		1		P -		CH- / Page-
	2		2		Info		Info / Angle
	3		3		Menu		Menu / Home
	4		4		Guide		Guide / EPG / -/-
	5		5		Tools		Setup / OPT /
	6		6		Up		Up
	7		7		Return		Shift + Back / Return
	8		8		Left		Left
	9		9		Enter		OK
	FAV CH		Fav / Marker / PC		Right		Right
	0		0		Internet		Smart / List
	PRE CH		Back / Return		Down		Down
	Vol+		Vol+		Exit		Exit / Cancel / Clear
	Mute		Mute / Dimmer		Red		Red / Netflix / Search
	P +		CH+ / Page+		Green		Green / APP / Repeat





Originale	Sostituto	Originale	Sostituto
 Yellow	 Yellow / YouTube / Repeat		
 Blue	 Blue / Prime Video / Random		
 TTX/MIX	 Text / Goto		
 Media P	 Display / Media		
 Content	 D.Menu / Top		
 CH LIST	 Shift + Smart / List		
 AD	 Audio / Lang I/II		
 SUBT.	 Subtitle / EQ		
 <<	 << / Tune-		
 Pause	 Pause / Step / Freeze		
 >>	 >> / Tune+		
 Rec	 Rec / Rec Mode		
 Play	 Play / Slow		
 Stop	 Stop / Hold		

Originale	Sostituto	Originale	Sostituto

