



 









 
 
 


 
 

 
 
 

 
 



 



 



 
 


 
 


 

 

 



 


 
 



 








| Originale   |               | Sostituto   |                | Originale   |                       | Sostituto   |       |
|---|---------------|---|----------------|---|-----------------------|---|-------|
|    | Standby       |    | Power          |    | Right                 |    | Right |
|    | Display       |    | Shift + Info   |    | Down                  |    | Down  |
|    | Nicam / Eject |    | Eject          |    | Source                |    | AV    |
|    | Mute          |    | Mute           |    | Exit                  |    | Exit  |
|    | P.Mode        |    | Shift + Format |    | 1                     |    | 1     |
|    | S.Mode        |    | Shift + Dual   |    | 2                     |    | 2     |
|    | Sleep         |    | Sleep          |    | 3                     |    | 3     |
|    | Aspect        |    | Format         |    | 4                     |    | 4     |
|    | Vol -         |    | Vol -          |    | 5                     |    | 5     |
|    | Vol +         |    | Vol +          |    | 6                     |    | 6     |
|    | CH -          |    | Ch -           |    | 7                     |    | 7     |
|  | CH +          |  | Ch +           |  | 8                     |  | 8     |
|  | LCD-Menu      |  | Menu           |  | 9                     |  | 9     |
|  | DVD-Setup     |  | Options        |  | 0                     |  | 0     |
|  | Up            |  | Up             |  | Recall                |  | Back  |
|  | Left          |  | Left           |  | Text / Audio          |  | Text  |
|  | Enter         |  | Ok             |  | Hold / A-B / Rec List |  | Smart |



