


 




 

 
















 
 


 




 
 


 

 







 
 

 






 



 






 
 

 


 


 




 

 









Originale	Sostituto	Originale	Sostituto
 Power	 Power	 Up / CH +	 Up
 Mute	 Mute	 Up / CH +	 Ch +
 1	 1	 Down / CH -	 Down
 2	 2	 Down / CH -	 Ch -
 3	 3	 Right / Vol +	 Right
 4	 4	 Right / Vol +	 Vol +
 5	 5	 Left / Vol -	 Left
 6	 6	 Left / Vol -	 Vol -
 7	 7	 OK	 Ok
 8	 8	 Sub-T	 Subt
 9	 9	 Text	 Text
 0	 0	 Audio	 Dual
 Menu	 Menu	 Mode	 Smart
 Exit / Last	 Exit	 EPG	 Guide
 Exit / Last	 Back	 Favor	 Pre Ch
 TV / R	 TV/R	 Red / I<<	 Red
 Info	 Info	 Red / I<<	 I<<

Originale	Sostituto	Originale	Sostituto
 Up / CH +	 Up	 Up / CH +	 Ch +
 Down / CH -	 Down	 Down / CH -	 Ch -
 Right / Vol +	 Right	 Right / Vol +	 Vol +
 Right / Vol +	 Right	 Left / Vol -	 Left
 Left / Vol -	 Left	 Left / Vol -	 Vol -
 Left / Vol -	 Left	 OK	 Ok
 OK	 Ok	 Sub-T	 Subt
 Sub-T	 Subt	 Text	 Text
 Text	 Text	 Audio	 Dual
 Audio	 Dual	Mode	Smart
Mode	Smart	EPG	Guide
EPG	Guide	Favor	Pre Ch
Favor	Pre Ch	Red / I<<	Red
Red / I<<	Red	Red / I<<	I<<
Red / I<<	I<<		





Originale	Sostituto
 Green / <<	 Green
 Green / <<	 <<
 Yellow / >>	 Yellow
 Yellow / >>	 >>
 Blue / >>	 Blue
 Blue / >>	 >>
 Time Shift	 Options
 Rec	 Rec
 Stop	 Stop
 Play / Pause	 Play
 Play / Pause	 Pause

Originale	Sostituto

