



 

 


 


 

 


 





 

 
 
 
 
 

 






Originale	Sostituto
 Standby	 Power
 Mute	 Mute
 1	 1
 2	 2
 3	 3
 4	 4
 5	 5
 6	 6
 7	 7
 8	 8
 9	 9
 0	 0
 (i) / Display	 Info
 Recall / Mouse	 Back
 TV / Radio	 TV/R
 Audio	 Dual
 Sub-T	 Subt

Originale	Sostituto
 Source	 AV
 www Browser	 Shift + Media
 Up	 Up
 Left	 Left
 Enter	 Ok
 Right	 Right
 Down	 Down
 Menu	 Menu
 Exit	 Exit
 Vol +	 Vol +
 Vol -	 Vol -
 Home	 Smart
 Setup	 Options
 CH +	 Ch +
 Refresh	 Media
 CH -	 Ch -
 Red	 Red



