



Originale	Sostituto
 Power	 Power
 Mute	 Mute / Dimmer
 V.Format	 Shift + Picture / Format
 Sleep	 Sleep / Timer
 Text	 Text / Goto
 TV / Radio	 TV/Radio /
 1	 1
 2	 2
 3	 3
 4	 4
 5	 5
 6	 6
 7	 7
 8	 8
 9	 9
 [[≡]]	 Smart / List
 0	 0

Originale	Sostituto
 Recall	 Back / Return
 Vol -	 Vol-
 Vol +	 Vol+
 CH -	 CH- / Page-
 CH +	 CH+ / Page+
 Menu	 Menu / Home
 Up	 Up
 Exit	 Exit / Cancel / Clear
 Left	 Left
 OK	 OK
 Right	 Right
 Page Down	 Shift + CH- /
 Down	 Down
 Page Up	 Shift + CH+ /
 FAV	 Fav / Marker / PC
 Guide	 Guide / EPG / -/-
 Info	 Info / Angle





Originale	Sostituto
	Display / Media
	Red / Netflix / Search
	Green / APP / Repeat
	Yellow / YouTube / Repeat
	Audio / Lang I/II
	Blue / Prime Video / Random
	Subtitle / EQ
	Play / Slow
	Stop / Hold
	Pause / Step / Freeze
	Rec / Rec Mode
	Shift + Text /
	Shift + Pause / Step /
	<< / Tune-
	>> / Tune+
	Zoom / Size
	Shift + Stop /

Hold

Originale	Sostituto
	I<< / Preset-
	>>I / Preset+
	Shift + 0
	Picture / Format
	Setup / OPT /
	Shift + Setup / OPT / Tools

