
 





Originale	Sostituto
 Power MD	 Power
 TV	 TV/R
 CD	 Yellow
 DVD	 Blue
 Tuner/Band	 Green
 Tape	 Red
 VCR	 Smart
 MD	 Media
 Vol+	 Vol +
 Vol-	 Vol -
 Muting	 Mute
 Stop MD	 Stop
 Play MD	 Play
 <</<< MD	 <<
 >>/>> MD	 >>
 Up	 Up
 Down	 Down

Originale	Sostituto
 Right	 Right
 Left	 Left
 Enter	 Ok
 Menu	 D. Menu
 Display	 Info
 Top Menu/Disc/Deck	 Menu
 1 MD	 1
 2 MD	 2
 3 MD	 3
 4 MD	 4
 5 MD	 5
 6 MD	 6
 7 MD	 7
 8 MD	 8
 9 MD	 9
 0 MD	 0
 >10/-/- MD	 Guide





Originale	Sostituto
Tv/AV	AV
Stereo	Dual
Surround	Options
SFC	Subt
Test	Back
Delay	Format
Level	3D
+	Ch +
-	Ch -
Power TV	Shift + Power
Tv Vol Up	Shift + Vol +
Tv Vol Down	Shift + Vol -
1 Tv	Shift + 1
2 Tv	Shift + 2
3 Tv	Shift + 3
4 Tv	Shift + 4
5 Tv	Shift + 5

Originale	Sostituto
6 Tv	Shift + 6
7 Tv	Shift + 7
8 Tv	Shift + 8
9 Tv	Shift + 9
0 Tv	Shift + 0
>10/-- Tv	Shift + Guide







Originale	Sostituto
Power DVD	Power
TV	TV/R
VCR	Smart
Tuner/Band	Green
Tape	Red
MD	Media
CD	Yellow
DVD	Blue
Play DVD	Play
I<</<< DVD	<<
Stop DVD	Stop
>>/>>I DVD	>>
Top Menu/Disc/Deck	Menu
Display	Info
Menu	D. Menu
Up	Up
Down	Down

Originale	Sostituto
Right	Right
Left	Left
Enter	Ok
Stereo	Dual
Surround	Options
SFC	Subt
Test	Back
Delay	Format
Level	3D
+	Ch +
-	Ch -
1 DVD	1
2 DVD	2
3 DVD	3
4 DVD	4
5 DVD	5
6 DVD	6





Originale		Sostituto		Originale		Sostituto	
	7 DVD		7				
	8 DVD		8				
	9 DVD		9				
	0 DVD		0				
	>10/-/- DVD		Guide				
	Vol+		Vol +				
	Vol-		Vol -				
	Muting		Mute				







Originale	Sostituto
 Power CD	 Power
 TV	 TV/R
 VCR	 Smart
 CD	 Yellow
 DVD	 Blue
 Tape	 Red
 MD	 Media
 Tuner/Band	 Green
 Stop CD	 Stop
 I<</<< CD	 <<
 >>/>>I CD	 >>
 Play CD	 Play
 Menu	 D. Menu
 Display	 Info
 Top Menu/Disc/Deck	 Menu
 Up	 Up
 Down	 Down

Originale	Sostituto
 Right	 Right
 Left	 Left
 Enter	 Ok
 Stereo	 Dual
 Surround	 Options
 SFC	 Subt
 Test	 Back
 Delay	 Format
 Level	 3D
 +	 Ch +
 -	 Ch -
 Vol+	 Vol +
 Vol-	 Vol -
 Muting	 Mute
 Power Tape	 Shift + Power
 Stop Tape	 Shift + Stop
 Play Tape	 Shift + Play








 





 





 









 













 





















 






Originale	Sostituto
  <</><< Tape	 +  Shift + <<
 >>/>>  Tape	 +  Shift + >>
 Top Menu/Disc/Deck	 +  Shift + Menu
 1 CD-Tape	 1
 2 CD-Tape	 2
 3 CD-Tape	 3
 4 CD-Tape	 4
 5 CD-Tape	 5
 6 CD-Tape	 6
 7 CD-Tape	 7
 8 CD-Tape	 8
 9 CD-Tape	 9
 0 CD-Tape	 0
 >10/-/- CD-Tape	 GUIDE
 Direct Tuning/Disc Enter	 REPEAT TEXT

Originale	Sostituto















Originale	Sostituto	Originale	Sostituto
 Power VCR	 Power	 6 VCR	 6
 VCR	 Smart	 7 VCR	 7
 Tape	 Red	 8 VCR	 8
 TV	 TV/R	 9 VCR	 9
 CD	 Yellow	 0 VCR	 0
 DVD	 Blue	 >10/-/- VCR	 Guide
 Tuner/Band	 Green	 Direct Tuning/Disc Enter	 Text
 MD	 Media	 Vol+	 Vol +
 Stop	 Stop	 Vol-	 Vol -
 I<</<<	 <<	 Muting	 Mute
 >>/>>I	 >>	 Up	 Up
 Play	 Play	 Down	 Down
 1 VCR	 1	 Right	 Right
 2 VCR	 2	 Left	 Left
 3 VCR	 3	 Enter	 Ok
 4 VCR	 4	 Top Menu/Disc/Deck	 Menu
 5 VCR	 5	 Display	 Info





Originale	Sostituto	Originale	Sostituto
	Menu		D. Menu
	Stereo		Dual
	Surround		Options
	SFC		Subt
	Test		Back
	Delay		Format
	Level		3D
	+		Ch +
	-		Ch -
	Power Tuner/Band		Shift + Power
	1 Tuner/Band		Shift + 1
	2 Tuner/Band		Shift + 2
	3 Tuner/Band		Shift + 3
	4 Tuner/Band		Shift + 4
	5 Tuner/Band		Shift + 5
	6 Tuner/Band		Shift + 6
	7 Tuner/Band		Shift + 7

Originale	Sostituto	Originale	Sostituto
	8 Tuner/Band		Shift + 8
	9 Tuner/Band		Shift + 9
	0 Tuner/Band		Shift + 0
	>10/-/-		Shift + Guide

