





Originale	Sostituto
 Power	 Power
 Source	 AV
 Exit	 Exit
 >>	 >>
 Red	 Red
 Rec	 Rec
 Green	 Green
 <<	 <<
 Yellow	 Yellow
 Stop	 Stop
 Blue	 Blue
 Play	 Play
 [=]/Timer	 Text
	 Shift + Text
 [=I=]/[.≡]	 TV/R
 I-II/[♦]	 Dual
 [   ]/[+]	 Guide

Originale	Sostituto
 Menu Tv	 Menu
 Menu Digital	 D. Menu
 [i+]	 Info
 OK/Select	 Ok
 Menu DVD	 Shift + Menu
 D.Menu DVD	 Shift + Smart
 OK DVD	 Shift + Ok
 A/D	 Smart
 Up	 Up
 Down	 Down
 Right	 Right
 Left	 Left
 Up DVD	 Shift + Up
 Down DVD	 Shift + Down
 Right DVD	 Shift + Right
 Left DVD	 Shift + Left
 P+ DVD	 Shift + Ch +





Originale	Sostituto
 P- DVD	 Shift + Ch -
 P+	 Ch +
 P-	 Ch -
 Vol+	 Vol +
 Vol-	 Vol -
 [♦]/[?]	 Eject
 [<>]	 Format
 Timer	 Shift + AV
	 Media
 P<P	 Pre Ch
 1	 1
 2	 2
 3	 3
 4	 4
 5	 5
 6	 6
 7	 7

Originale	Sostituto
 8	 8
 9	 9
 0	 0
 Mute	 Mute
 J/Smart Sound	 Shift + Dual
 [ ]/Smart Picture	 3D
 1 DVD	 Shift + 1
 2 DVD	 Shift + 2
 3 DVD	 Shift + 3
 4 DVD	 Shift + 4
 5 DVD	 Shift + 5
 6 DVD	 Shift + 6
 7 DVD	 Shift + 7
 8 DVD	 Shift + 8
 9 DVD	 Shift + 9
 0 DVD	 Shift + 0

