



Originale	Sostituto
Power	Power
Muting	Mute / Dimmer
Track >>I	>>I / Preset+
Function Up	CH+ / Page+
Volume Up	Vol+
I<< Track	I<< / Preset-
Function Down	CH- / Page-
Volume Down	Vol-
Pause	Pause / Step / Freeze
Stop	Stop / Hold
Play	Play / Slow

Originale	Sostituto

