

 
 
 




 





 

 



 

 
 





 





 





 

 


 




Originale	Sostituto	Originale	Sostituto
	MUTE Mute		FM
	Vol +		DUAL Dual
	Vol -		HOME SMART Smart
	1		TOP MENU MENU Menu
	2		APP MEDIA Media
	3		Stop
	4		ECO 3D 3D
	5		DISPLAY INFO Info
	6		REPEAT TEXT Text
	7		SETTINGS OPT Options
	8		PICTURE FORMAT Format
	9		Power
	0 / AV		
	0 / AV		
	-/-- GUIDE Guide		
	- CH Ch -		
	+ CH Ch +		

Originale	Sostituto	Originale	Sostituto
	FM		DUAL Dual
	...		HOME SMART Smart
	[M]		TOP MENU MENU Menu
	100		APP MEDIA Media
	Hold		Stop
	^v		ECO 3D 3D
	[?]		DISPLAY INFO Info
	TTX / Mix		REPEAT TEXT Text
> < (Norm) icon" data-bbox="515 505 540 535"/>	> < (Norm)		SETTINGS OPT Options
	→◇ (Sint)		PICTURE FORMAT Format
	Power		Power

