




 
 

 



 

 

 

 
 
 
 
 


 
 
 




 








Originale	Sostituto
 Standby/On	 Power
 Eject	 Eject
 1	 1
 2	 2
 3	 3
 4	 4
 5	 5
 6	 6
 7	 7
 8	 8
 9	 9
 0	 0
 Dimmer	 Guide
 Sleep	 Sleep
 Bass	 Green
 Treble	 Blue
 Night	 Exit

Originale	Sostituto
 Repeat/Freq/Text	 Text
 Prog	 Shift + Sleep
 A-B	 Pre Ch
 Stop	 Stop
 Pause/PTY Seek	 Pause
 Shuffle/PTY Seek Start	 TV/R
 I<</Preset	 I<<
 Play	 Play
 >>I/Preset Up	 >>I
 Menu	 Menu
 On Screen	 3D
 Set Up	 Options
 Top	 Back
 Up	 Up
 Down	 Down
 Right	 Right
 Left	 Left





Originale	Sostituto
 Enter	 Ok
 Area	 Info
 Enhancer	 AV
 Mode	 D. Menu
 Direct	 Red
 Vol+	 Vol +
 Vol-	 Vol -
 Mute	 Mute
 Surround	 List
 AUX	 Media
 USB	 Smart
 Subtitle	 Subt
 Angle	 Format
 Zoom	 Shift + Eject
 Audio	 Dual

Originale	Sostituto



