



 

 








 


 



 
 













Originale	Sostituto
 Power	 Power
 Input TV	 AV
 Input AV	 Shift + AV
 (<>)	 Shift + Dual
 Viera Link	 Dual
 Option	 Options
 Direct TV Rec	 TV/R
 Aspect	 Format
 Exit	 Exit
 Up	 Up
 Left	 Left
 OK	 Ok
 Right	 Right
 Down	 Down
 Menu	 Menu
 Return	 Back
 Red	 Red

Originale	Sostituto
 Green	 Green
 Yellow	 Yellow
 Blue	 Blue
 Text	 Text
 Index	 Shift + Info
 Hold	 Shift + Text
 1	 1
 2	 2
 3	 3
 4	 4
 5	 5
 6	 6
 7	 7
 8	 8
 9	 9
 0 / VCR	 0
 i	 Info





Originale		Sostituto	
	Mute		Mute
	CH +		Ch +
	CH -		Ch -
	Vol +		Vol +
	Vol -		Vol -
	VCR Power		Smart
	DVD Power		Media
	DVD Rec		Rec
	VCR Rec		Shift + Rec
	DVD		Shift + Ch -
	VCR		Shift + Down
	DVD		Shift + Ch +
	VCR		Shift + Up
	DVD I<<<		I<<<
	DVD <<<		<<<
	VCR <<<		Shift + <<<
	VCR I<<<		Shift + I<<<

Originale		Sostituto	
	DVD >>>I		>>>I
	DVD >>>		>>>
	VCR >>>		Shift + >>>
	VCR >>>I		Shift + >>>I
	DVD Stop		Stop
	VCR Stop		Shift + Stop
	DVD Pause/Step		Pause
	VCR Pause / Step		Shift + Pause
	DVD Play		Play
	VCR Play		Shift + Play

