 


 
 

 




 


 
 


 





 










 
 











 



 
 












 
 




Originale		Sostituto		Originale		Sostituto	
	Standby		Power		Down		Down
	Mute		Mute		Right		Right
	P/N		Smart		Left		Left
	Open/Close		Eject		OK		Ok
	<<		<<		Vol+		Vol +
	>>		>>		Vol-		Vol -
	Play/Pause		Play		1		1
	Stop		Stop		2		2
	I<<		I<<		3		3
	>>I		>>I		4		4
	Setup		Options		5		5
	Source		AV		6		6
	Info		Info		7		7
	Return/Exit		Exit		8		8
	CH+		Ch +		9		9
	CH-		Ch -		0		0
	Up		Up		Slow		Back





Originale		Sostituto		Originale		Sostituto	
	Goto		Media				
	Program		Sleep				
	Title/TTX		Text				
	Audio		Dual				
	Subtitle		Subt				
	Red/Repeat		Red				
	Green/A-B		Green				
	Yellow/Menu		Yellow				
	Blue/Angle		Blue				
	EPG		Guide				
	Favorite		Pre Ch				
	Tv/Radio		TV/R				
	Zoom	 + 	Shift + Eject				

