



	Originale	Sostituto		Originale	Sostituto
	Power		Power		Exit
	Mute		Mute		Up
	1		1		Down
	2		2		Right
	3		3		Left
	4		4		Ok
	5		5		Vol +
	6		6		Vol -
	7		7		Shift + Dual
	8		8		Shift + Format
	9		9		Ch +
	0		0		Ch -
	Audio		Dual		Sleep
	Recall		Back		Format
	Tv Menu		Menu		Eject
	Source		AV		Tv/Radio
	ChList		List		Text



