



	Originale	Sostituto		Originale	Sostituto
	Power		Power		Exit
	Mute		Mute		Up
	1		1		Down
	2		2		Right
	3		3		Left
	4		4		Ok
	5		5		Vol +
	6		6		Vol -
	7		7		Shift + Dual
	8		8		Shift + Format
	9		9		Ch +
	0		0		Ch -
	Audio		Dual		Sleep
	Recall		Back		Format
	Tv Menu		Menu		Eject
	Source		AV		TV/R
	ChList		List		Text





	Originale	Sostituto	
EPG	Epg	GUIDE	Guide
FAV	Fav	FAV PRE-CH	Pre Ch
INFO	Info	DISPLAY INFO	Info
Red	Red	A	Red
Green	Green	B	Green
Yellow	Yellow	C	Yellow
Blue	Blue	D	Blue
REVEAL	Reveal	APP MEDIA	Media
HOLD	Hold	E-MANUAL D.MENU	D. Menu
INDEX	Index	SHIFT + DISPLAY INFO	Shift + Info
SUBPAGE	Subpage	SHIFT + TIMER AV	Shift + AV
LIST	List	HOME SMART	Smart
MIX	Mix	SETTINGS OPT	Options
SUBTITLE	Subtitle	AD SUBT	Subt
SIZE	Size	ECO 3D	3D
<<	<<	<<	<<
>>	>>	>>	>>

	Originale	Sostituto	
I<<	I<<	<<	I<<
>>I	>>I	>>	>>I
Play	Play	PLAY MODE	Play
Pause	Pause		Pause
Stop	Stop	■	Stop
Rec/Rep	Rec/Rep	REC MODE	Rec

