



Originale	Sostituto
Power	Power
Open/Close	Eject
Tv/DVD	TV/R
*1	Shift + 1
AV/INPUT	AV
1	1
2	2
3	3
4	4
5	5
6	6
7	7
8	8
9	9
0	0
I.Skip	Guide
<< Scan	<<

Originale	Sostituto
Scan >>	>>
I<< Skip	I<<
Skip >>I	>>I
Pause/Step	Pause
Play	Play
Stop	Stop
Home	Smart
Menu/List	Menu
Display	Info
Return	Back
Up/PRCH+	Up
Down/PR/CH-	Down
Right	Right
Left	Left
Enter	Ok
Audio	Dual
Subtitle	Subt





Originale	Sostituto		
ZOOM	Zoom	SHIFT + ZOOM	Shift + Eject
CHP. ADD	CHP.ADD	A	Red
REC	Rec	REC MODE	Rec
REC MODE	Rec Mode	SHIFT + REC MODE	Shift + Rec
TITLE	Title	SETTINGS OPT	Options
THUMBNAIL	Thumbnail	REPEAT TEXT	Text
PLAY MODE	Play Mode	SHIFT + PLAY MODE	Shift + Play
MARKER	Marker	PICTURE FORMAT	Format
SEARCH	Search	SHIFT + SEARCH TV/R	Shift + TV/R
CLEAR	Clear	CLEAR EXIT	Exit
*2	*2	SHIFT + 2	Shift + 2
*3	*3	SHIFT + 3	Shift + 3
TV POWER	Power Tv	SHIFT + TV POWER	Shift + Power
AV/INPUT	AV/Input Tv	SHIFT + TIMER AV	Shift + AV
PR/CH+	PR/CH+ Tv	+ CH	Ch +
PR/CH-	PR/CH- Tv	CH -	Ch -
VOL+	Vol+ Tv	+ VOL	Vol +

Originale	Sostituto		
VOL-	Vol- Tv	VOL -	Vol -
MUTE	Mute Tv	MUTE	Mute

