 


 

 
 
 





 




 














 









 

 





 

 
 
 

 

 












Originale	Sostituto	Originale	Sostituto
 Power	 Power	 EPG	 Guide
 3D	 3D	 Exit	 Exit
 Mute	 Mute	 Up	 Up
 1	 1	 Left	 Left
 2	 2	 OK	 Ok
 3	 3	 Right	 Right
 4	 4	 Down	 Down
 5	 5	 Vol +	 Vol +
 6	 6	 Vol -	 Vol -
 7	 7	 Prog -	 Ch -
 8	 8	 Prog +	 Ch +
 9	 9	 Liste	 List
 0	 0	 TXT	 Text
 Timer	 AV	 S-T	 Subt
 Audio	 Dual	 TV / R	 TV/R
 Menu	 Menu	 Play / Pause	 Play
 Info	 Info	 Play / Pause	 Pause



