 

 



 

 

 

 

 

 



 

 

 
 












Originale	Sostituto
 Sleep	 Sleep / Timer
 Standby AV	 Shift + Power
 System Standby	 Power
 Video1	 Shift + 4
 Video 2	 Shift + 1
 DVD	 Shift + 2
 MD/Tape	 Shift + 5
 CD	 Shift + 3
 Tuner	 Shift + 6
 Top Menu	 Shift + D.Menu / Top Menu
 1 Tuner	 1
 Up	 Up
 2 Tuner	 2
 DVD Menu	 D.Menu / Top
 3 Tuner	 3
 Left	 Left
 4 Tuner	 4

Originale	Sostituto
 Enter	 OK
 5 Tuner	 5
 Right	 Right
 6 Tuner	 6
 7 Tuner	 7
 Down	 Down
 8 Tuner	 8
 Recall	 Fav / Marker / PC
 9 Tuner	 9
 >10 Tuner/Shift/-/-	 Guide / EPG / -/-
 0 Tuner	 0
 Enter/D.Tuning/Return Tuner	 Back / Return
 I<</CH/Preset-	 I<< / Preset-
 I<</CH Preset-Tuner	 Shift + I<< / Preset-
 >>I/CH/Preset+	 >>I / Preset+
 >>I/CH Preset+ Tuner	 Shift + >>I / Preset+
 Tv/Video/ANT	 AV / Input / RDS





Originale		Sostituto	
	<<		<< / Tune-
	>>		>> / Tune+
	D.Skip/TV/VTR		TV/Radio /
	Play		Play / Slow
	Pause		Pause / Step / Freeze
	Stop		Stop / Hold
	2CH		Sound / Title
	A.F.D.		Eject / Surround
	Movie/Music		Audio / Lang I/II
	Test Tone		Subtitle / EQ
	Main Menu		Menu / Home
	Multi CH		Picture / Format
	< Menu		Shift + Left
	Menu >		Shift + Right
	Muting		Mute / Dimmer
	-		CH- / Page-
	+		CH+ / Page+

Originale		Sostituto	
	Master Vol+		Vol+
	Tv Vol+		Shift + Vol+
	Tv CH+		Shift + CH+ /
	Master Vol-		Vol-
	Tv Vol-		Shift + Vol-
	Tv CH-		Shift + CH- /





 

 

 

 

 

 

 

 




 
 

 
 
 

 







Originale	Sostituto
 Standby	 Power
 Video 1	 Shift + 4
 Video 2	 Shift + 1
 DVD	 Shift + 2
 MD/Tape	 Shift + 5
 CD	 Shift + 3
 Tuner	 Shift + 6
 1	 1
 2	 2
 3	 3
 4	 4
 5	 5
 6	 6
 7	 7
 8	 8
 9	 9
 >10/Shift/-/-	 Guide / EPG / -/-

Originale	Sostituto
 0	 0
 Enter/D.Tuning/Return	 Back / Return
 I<<	 I<< / Preset-
 >>I	 >>I / Preset+
 <<	 << / Tune-
 >>	 >> / Tune+
 D.Skip/TV/VTR	 TV/Radio /
 Play	 Play / Slow
 Pause	 Pause / Step / Freeze
 Stop	 Stop / Hold
 Muting	 Mute / Dimmer
 Master Vol+	 Vol+
 Master Vol-	 Vol-





Originale	Sostituto
 Standby CD	 Power
 Standby Video	 Shift + Power
 Video 1	 Smart / List
 Video 2	 Display / Media
 DVD	 Blue / Prime Video / Random
 MD/Tape	 Green / APP / Repeat
 CD	 Yellow / YouTube / Repeat
 Tuner	 Red / Netflix / Search
 1 CD	 1
 1 Video 1	 Shift + 1
 2 CD	 2
 2 Video 1	 Shift + 2
 3 CD	 3
 3 Video 1	 Shift + 3
 4 CD	 4
 4 Video 1	 Shift + 4
 5 CD	 5

Originale	Sostituto
 5 Video 1	 Shift + 5
 6 CD	 6
 6 Video 1	 Shift + 6
 7 CD	 7
 7 Video 1	 Shift + 7
 8 CD	 8
 8 Video 1	 Shift + 8
 9 CD	 9
 9 Video 1	 Shift + 9
 >10/Shift/-/- CD	 Guide / EPG / -/-
 >10/Shift/-/- Video 1	 Shift + Guide / EPG / -/-
 0 CD	 0
 0 Video 1	 Shift + 0
 Enter/D.Tuning/Return CD	 Back / Return
 Enter/D.Tuning/Return Video 1	 Shift + Back / Return
 I<< CD	 I<< / Preset-
 I<< Video 1	 Shift + I<< / Preset-





 

 

 

 

 

 
 
 

 




 
 

 
 
 

 

 





Originale		Sostituto	
>>I CD		>>I / Preset+	
>>I Video 1		Shift + >>I / Preset+	
<< CD		<< / Tune-	
<< Video 1		Shift + << /	
>> CD		>> / Tune+	
>> Video 1		Shift + >> /	
D.Skip/TV/VTR CD		TV/Radio /	
D.Skip/TV/VTR Video 1		Shift + TV/Radio / Program	
Play CD		Play / Slow	
Play Video 1		Shift + Play /	
Pause CD		Pause / Step / Freeze	
Pause Video 1		Shift + Pause / Step /	
Stop CD		Stop / Hold	
Stop Video 1		Shift + Stop /	
Muting		Mute / Dimmer	
Master Vol+		Vol+	
Master Vol-		Vol-	

Originale	Sostituto





Originale	Sostituto
 Standby	 Power
 Standby Video	 Shift + Power
 Video 1	 Smart / List
 Video 2	 Display / Media
 DVD	 Blue / Prime Video / Random
 MD/Tape	 Green / APP / Repeat
 CD	 Yellow / YouTube / Repeat
 Tuner	 Red / Netflix / Search
 1 MD/Tape	 1
 1 Video 2	 Shift + 1
 2 MD/Tape	 2
 2 Video 2	 Shift + 2
 3 MD/Tape	 3
 3 Video 2	 Shift + 3
 4 MD/Tape	 4
 4 Video 2	 Shift + 4
 5 MD/Tape	 5

Originale	Sostituto
 5 Video 2	 Shift + 5
 6 MD/Tape	 6
 6 Video 2	 Shift + 6
 7 MD/Tape	 7
 7 Video 2	 Shift + 7
 8 MD/Tape	 8
 8 Video 2	 Shift + 8
 9 MD/Tape	 9
 9 Video 2	 Shift + 9
	 Guide / EPG / -/-
	 Shift + Guide / EPG / -/-
 0 MD/Tape	 0
 0 Video 2	 Shift + 0
 Enter/D.Tuning/Return MD/Tape	 Back / Return
 Enter/D.Tuning/Return Video 2	 Shift + Back / Return
	 I<< / Preset-
	 Shift + I<< / Preset-





Originale	Sostituto
>>  MD/Tape	>>  / Preset+
>>  Video 2	+  Shift + >>  / Preset+
<<< MD/Tape	<<< / Tune-
<<< Video 2	+  Shift + <<< /
>>> MD/Tape	>>> / Tune+
>>> Video 2	+  Shift + >>> /
D.Skip/TV/VTR MD/Tape	AV / Input / RDS
D.Skip/TV/VTR Video 2	+  Shift + AV / Input / RDS
Play MD/Tape	Play / Slow
Play Video 2	+  Shift + Play /
Pause MD/Tape	Pause / Step / Freeze
Pause Video 2	+  Shift + Pause / Step /
Stop MD/Tape	Stop / Hold
Stop Video 2	+  Shift + Stop /
Muting	Mute / Dimmer
Master Vol+	Vol+
Master Vol-	Vol-

Originale	Sostituto

