



Originale	Sostituto
 Power	 Power
 1	 1
 2	 2
 3	 3
 4	 4
 5	 5
 6	 6
 7	 7
 8	 8
 9	 9
 0	 0
 Recall	 Back
 Still	 Pause
 TV / Input	 AV
 Multimedia	 Media
 Zoom -	 Shift + Down
 Zoom +	 Shift + Up

Originale	Sostituto
 Up / PR +	 Up
 Up / PR +	 Ch +
 Down / PR -	 Down
 Down / PR -	 Ch -
 Right / Vol +	 Right
 Right / Vol +	 Vol +
 Left / Vol -	 Left
 Left / Vol -	 Vol -
 Menu	 Menu
 Menu	 Ok
 Prev PR	 Pre Ch
 Screen Size	 3D
 Mute	 Mute
 Sleep	 Sleep
 [≡]	 Text
 [≡?]	 Smart
 [≡X]	 Exit





Originale		Sostituto		Originale		Sostituto	
	[≡↓]		Eject				
	[≡●]		TV/R				
	[≡□]		Stop				
	Pic Mode / [ /≡]		Format				
	Sound Mode / [≡i]		Dual				
	Red		Red				
	Green		Green				
	Yellow		Yellow				
	Blue / I-II		Blue				
	Blue / I-II		Shift + Dual				





Originale	Sostituto
Power	Power
1	1
2	2
3	3
4	4
5	5
6	6
7	7
8	8
9	9
0	0
TV / Input	AV
Up / PR +	Up
Up / PR +	Ch +
Down / PR -	Down
Down / PR -	Ch -
Menu	Menu

Originale	Sostituto
Menu	Ok
<< FR / Slow	<<
Play	Play
>> FF / Slow	>>
Stop	Stop
I<< Prev	I<<
Open / Close	Eject
>>I Next	>>I
Pause	Pause





