



Originale	Sostituto
 Power	 Power
 1	 1
 2	 2
 3	 3
 4	 4
 5	 5
 6	 6
 7	 7
 8	 8
 9	 9
 0	 0
 Recall	 Back
 Still	 Pause
 TV / Input	 AV
 Multimedia	 Media
 Zoom -	 Shift + Down
 Zoom +	 Shift + Up

Originale	Sostituto
 Up / PR +	 Up
 Up / PR +	 Ch +
 Down / PR -	 Down
 Down / PR -	 Ch -
 Right / Vol +	 Right
 Right / Vol +	 Vol +
 Left / Vol -	 Left
 Left / Vol -	 Vol -
 Menu	 Menu
 Menu	 Ok
 Prev PR	 Pre Ch
 Screen Size	 3D
 Mute	 Mute
 Sleep	 Sleep
 [≡]	 Text
 [≡?]	 Smart
 [≡X]	 Exit



 


 

 



 





 
 
 

 

Originale		Sostituto	
	[≡↕]		Eject
	[≡●]		TV/R
	[≡□]		Stop
	Pic Mode / [≡]		Format
	Sound Mode / [≡i]		Dual
	Red		Red
	Green		Green
	Yellow		Yellow
	Blue / I-II		Blue
	Blue / I-II	+	Shift + Dual

Originale		Sostituto	





Originale	Sostituto
 Power	 Power
 1	 1
 2	 2
 3	 3
 4	 4
 5	 5
 6	 6
 7	 7
 8	 8
 9	 9
 0	 0
 TV / Input	 AV
 Up / PR +	 Up
 Up / PR +	 Ch +
 Down / PR -	 Down
 Down / PR -	 Ch -
 Menu	 Menu

Originale	Sostituto
 Menu	 Ok
 << FR / Slow	 <<
 Play	 Play
 >> FF / Slow	 >>
 Stop	 Stop
 I<< Prev	 I<<
 Open / Close	 Eject
 >>I Next	 >>I
 Pause	 Pause





Originale	Sostituto
Power	Power
1	1
2	2
3	3
4	4
5	5
6	6
7	7
8	8
9	9
0	0
Up / PR +	Up
Up / PR +	Ch +
Down / PR -	Down
Menu	Ok
Down / PR -	Ch -
Menu	Menu

Originale	Sostituto
Red	Red
Green	Green
Yellow	Yellow
Blue / I-II	Blue
Blue / I-II	Dual

