





 

 



 


























Originale	Sostituto
 Power	 Power
 TTX / M x	 Text / Got o
 TV / DTV	 Shift + TV/ Radi o / Program
 Gui de	 Gui de / EPG / - / -
 CH. Li st	 Smart / Li st
 1	 1
 2	 2
 3	 3
 4	 4
 5	 5
 6	 6
 7	 7
 8	 8
 9	 9
 APP	 Shift + Green / APP /
 0	 0
 Pre-CH / Back	 Fav / Marker / PC

Originale	Sostituto
 Pre-CH / Back	 Back / Ret urn
 Mute	 Mute / Di mmer
 Vol +	 Vol +
 P +	 CH+ / Page+
 Source	 AV / Input / RDS
 Vol -	 Vol -
 P -	 CH / Page-
 D. Menu	 D. Menu / Top
 I nfo	 I nfo / Angl e
 Menu	 Menu / Home
 Up	 Up
 Exi t	 Exi t / Cancel / Clear
 Lef t	 Lef t
 Ent er / OK	 OK
 Ri ght	 Ri ght
 Down	 Down
 Red	 Red / Netfli x / Search



