
 



 

 








Originale		Sostituto		Originale		Sostituto	
	Power		Power		Sleep		Sleep
	Mute		Mute		Vol +		Vol +
	1		1		Vol -		Vol -
	2		2		Menu		Menu
	3		3		Exit		Exit
	4		4		Up		Up
	5		5		Left		Left
	6		6		Enter		Ok
	7		7		Right		Right
	8		8		Down		Down
	9		9		Source		AV
	0		0		EPG		Guide
	FAV		Pre Ch		Nicam		Options
	Recall		Back		P.Mode		Shift + Format
	CH +		Ch +		S.Mode		Shift + Dual
	CH -		Ch -		P.Size		Format
	Display		Info		Red / Goto		Red



