



Originale	Sostituto
Open / Close	Eject / Surround
Power	Power
VCR	Shift + 4
DVD	Shift + 2
Input	AV / Input / RDS
1 / Tracking -	Shift + Left
1 / Tracking -	1
2	2
3 / Tracking +	3
3 / Tracking +	Shift + Right
4	4
5	5
6	6
7	7
8	8
9	9
TV / VCR	TV/Radio /

Originale	Sostituto
0	0
Clear	Exit / Cancel / Clear
Menu	Menu / Home
Up / PR +	Up
Up / PR +	CH+ / Page+
Setup	Setup / OPT /
Left	Left
Enter	OK
Right	Right
Timer	Sleep / Timer
Down / PR -	CH- / Page-
Down / PR -	Down
Display	Display / Media
Rec	Rec / Rec Mode
Rec Mode	Shift + Rec / Rec Mode
Subtitle	Subtitle / EQ
Audio	Audio / Lang I/II



Program





Originale	Sostituto
Open / Close	Eject / Surround
Power	Power
VCR	Shift + 4
DVD	Shift + 2
Input	AV / Input / RDS
1 / Tracking -	Shift + Left
1 / Tracking -	1
2	2
3 / Tracking +	3
3 / Tracking +	Shift + Right
4	4
5	5
6	6
7	7
8	8
9	9
TV / VCR	TV/Radio /

Originale	Sostituto
0	0
Clear	Exit / Cancel / Clear
Menu	Menu / Home
Up / PR +	Up
Up / PR +	CH+ / Page+
Setup	Setup / OPT /
Left	Left
Enter	OK
Right	Right
Timer	Sleep / Timer
Down / PR -	CH- / Page-
Down / PR -	Down
Display	Display / Media
Rec	Rec / Rec Mode
Rec Mode	Shift + Rec / Rec Mode
Subtitle	Subtitle / EQ
Audio	Audio / Lang I/II



Program

