
 

 
 
 

 
 
 
 

 
 
 
 
 


 



 





 
 
 
 

 







Originale	Sostituto	Originale	Sostituto
 Power	 Power	 Up	 Up
 Mute	 Mute	 Left	 Left
 Play / Pause	 Play	 OK	 Ok
 USB / Stop	 Stop	 Right	 Right
 USB / Stop	 Media	 Down	 Down
 REC	 Rec	 Menu	 Menu
 Info	 Info	 Exit	 Exit
 Red / I<<	 Red	 Subtitle	 Subt
 Red / I<<	 I<<	 TXT	 Text
 Green / >>I	 >>I	 Recall	 Back
 Green / >>I	 Green	 Audio	 Dual
 Yellow / <<	 Yellow	 Page +	 Ch +
 Yellow / <<	 <<	 Page -	 Ch -
 Blue / >>	 Blue	 1	 1
 Blue / >>	 >>	 2	 2
 FAV	 Pre Ch	 3	 3
 SAT	 AV	 4	 4

Originale	Sostituto	Originale	Sostituto
 Up	 Up	 TV	 AUX
 Left	 Left	 DVD	 REC MODE
 OK	 Ok	 SAT	 PLAY MODE
 Right	 Right	 AUX	 STOP
 Down	 Down	 DISC NAV	 SOUND
 Menu	 Menu	 LIST	 AD
 Exit	 Exit	 DUAL	 SUBT
 Subtitle	 Subt	 PROG	 PICTURE
 TXT	 Text	 SLEEP	 TV/R
 Recall	 Back	 E-MANUAL	 REPEAT
 Audio	 Dual	 D.MENU	 TEXT
 Page +	 Ch +	 TOP MENU	 DISPLAY
 Page -	 Ch -	 MENU	 INFO
 1	 1	 CLEAR	 OK
 2	 2	 EXIT	 RETURN
 3	 3	 HOME	 SMART
 4	 4	 VOL +	 APP
		 VOL -	 MEDIA
		 1	 2
		 2	 3
		 3	 4
		 4	 CH +
		 CH -	 CH -
		 7	 8
		 8	 9
		 9	 FAV
		 GUIDE	 PRE-CH
		 A	 B
		 C	D





Originale		Sostituto		Originale		Sostituto	
5	5	5	5				
6	6	6	6				
7	7	7	7				
8	8	8	8				
9	9	9	9				
0	0	0	0				
EPG	EPG	GUIDE	Guide				
TV/RADIO	TV / Radio	TV/R	TV/R				

