
 
 
 
 





 
 
 
 




 

 
 

 



 
 
 
 

 
 






 
 
 
 
Originale	Sostituto
 Standby	 Power
 On	 Smart
 A	 Red
 B	 Green
 C	 Yellow
 D	 Blue
 E	 5
 F	 6
 Video	 7
 S Video	 8
 Menu	 Menu
 Eco Mode	 3D
 Return	 Back
 Reset	 Exit
 Enter	 Ok
 Up	 Up
 Down	 Down

Originale	Sostituto
 Left	 Left
 Right	 Right
 D.Zoom+	 Ch +
 D.Zoom-	 Ch -
 Muting PIC	 Mute
 Audio	 Dual
 Freeze	 Pause
 APA	 Options
 TWIN	 TV/R
 Vol+	 Vol +
 Vol-	 Vol -
 Focus	 Subt
 Zoom	 Eject
 Aspect	 Format
 Key Stone	 Media
 Pattern	 AV
 Shift	 Text






 
 
 


 
 
 
 
 


 




 
 
 

 

 

 
 
 

 


 
 
 

 
 
 
 


 
 
 

 


Originale	Sostituto
 Standby	 Power
 On	 Smart
 A	 Red
 B	 Green
 C	 Yellow
 D	 Blue
 E	 5
 F	 6
 Video	 7
 S Video	 8
 Menu	 Menu
 Eco Mode	 3D
 Up	 Up
 Enter	 Ok
 Down	 Down
 Right	 Right
 Left	 Left

Originale	Sostituto
 Return	 Back
 Reset	 Exit
 Muting PIC	 Mute
 Audio	 Dual
 Freeze	 Pause
 D.Zoom+	 Ch +
 D.Zoom-	 Ch -
 Vol+	 Vol +
 Vol-	 Vol -
 Aspect	 Format
 Zoom	 Eject
 APA	 Options
 TWIN	 TV/R
 Focus	 Subt
 Key Stone	 Media
 Pattern	 AV
 Shift	 Text





Originale	Sostituto
 Standby	 Power
 On	 Smart
 A	 Red
 B	 Green
 C	 Yellow
 D	 Blue
 E	 5
 F	 6
 Video	 7
 S Video	 8
 Menu	 Menu
 Eco Mode	 3D
 Up	 Up
 Down	 Down
 Enter	 Ok
 Left	 Left
 Right	 Right

Originale	Sostituto
 Return	 Back
 Reset	 Exit
 D.Zoom+	 Ch +
 D.Zoom-	 Ch -
 APA	 Options
 TWIN	 TV/R
 Freeze	 Pause
 Muting PIC	 Mute
 Audio	 Dual
 Vol+	 Vol +
 Vol-	 Vol -
 Focus	 Subt
 Zoom	 Eject
 Aspect	 Format
 Pattern	 AV
 Shift	 Text
 Key Stone	 Media

