 
 
 

 
 

 





 


 




 
 


 



 


 


 




Originale	Sostituto
 Power	 Power
 Mute	 Mute
 1	 1
 2	 2
 3	 3
 4	 4
 5	 5
 6	 6
 7	 7
 8	 8
 9	 9
 0	 0
 Audio	 Dual
 Recall	 Back
 TV Menu	 Menu
 Source	 AV
 Up	 Up

Originale	Sostituto
 Right	 Right
 Down	 Down
 Left	 Left
 OK	 Ok
 Ch. List	 Smart
 Exit	 Exit
 Vol +	 Vol +
 Vol -	 Vol -
 Sound	 Shift + Dual
 Ch +	 Ch +
 Ch -	 Ch -
 PIC	 Shift + Format
 Text	 Text
 Aspect	 Format
 Freeze	 Pause
 EPG	 Guide
 Sleep	 Sleep





	Originale	Sostituto	
	TV / RADIO	 TV/R	TV/R
	Info	 Info	Info
	FAV	 Pre Ch	Pre Ch
	Red	 Red	Red
	Green	 Green	Green
	Yellow	 Yellow	Yellow
	Blue	 Blue	Blue
	Reveal	 Media	Media
	Hold	 Stop	Stop
	List	 List	List
	Subpage	 <<	<<
	Size	 Eject	Eject
	Mix	 >>	>>
	Subtitle	 Subt	Subt
	Index	 Play	Play

Originale	Sostituto

