



Originale	Sostituto
Standby / On	Power
Function	AV
Open / Close	Eject
Karaoke	TV/R
Key / Echo	Guide
NET Contents	Media
YouTube	Shift + Media
Sleep	Sleep
Exit	Exit
Mic Vol +	Ch +
Mic Vol -	Ch -
Home Media	Shift + Smart
Dimmer	Shift + Mute
CD / SACD	D. Menu
Display	Info
USB REC	Rec
Sound	Shift + Dual

Originale	Sostituto
Vol +	Vol +
Vol -	Vol -
Mute	Mute
Top Menu	Shift + Menu
Menu / PopUp	Menu
Home Menu	Smart
Up	Up
Left	Left
Return	Back
Enter	Ok
Right	Right
Down	Down
Resolution	Format
Replay	Shift + Play
Continued	List
Tools	Options
Skip Search	Shift + Right





Originale	Sostituto	Originale	Sostituto
<< REV	<<	Clear	Shift + Exit
Play	Play	Repeat	Text
>> FWD	>>	Subtitle	Subt
I<< / < / <	I<<	Angle	Shift + Format
Pause	Pause	Virtual 3D Sound	3D
Stop	Stop	A-B	Shift + Text
>> / > / >	>>	Program / Red	Red
1	1	Program / Red	Shift + Sleep
2	2	RDS / Bookmark / Green	Green
3	3	Audio	Dual
4	4	RDS / Bookmark / Green	Pre Ch
5	5	PTY / Zoom /	Yellow
6	6	PTY / Zoom /	Shift + Eject
7	7	Index / Blue	Blue
8	8		
9	9		
0	0		

Originale	Sostituto	Originale	Sostituto
<< REV	<<	Clear	Shift + Exit
Play	Play	Repeat	Text
>> FWD	>>	Subtitle	Subt
I<< / < / <	I<<	Angle	Shift + Format
Pause	Pause	Virtual 3D Sound	3D
Stop	Stop	A-B	Shift + Text
>> / > / >	>>	Program / Red	Red
1	1	Program / Red	Shift + Sleep
2	2	RDS / Bookmark / Green	Green
3	3	Audio	Dual
4	4	RDS / Bookmark / Green	Pre Ch
5	5	PTY / Zoom /	Yellow
6	6	PTY / Zoom /	Shift + Eject
7	7	Index / Blue	Blue
8	8		
9	9		
0	0		

