



 





 

 







 





 



 










 




 




Originale	Sostituto
 System Power	 Power
 Standby	 Shift + Power
 CD	 Shift + 3
 MD/CD-R	 Shift + 5
 Tuner	 Shift + 6
 DVD	 Shift + 2
 DTV/CBL	 Shift + 1
 VCR	 Shift + 4
 V-AUX	 Shift + 7
 Multi CH In	 Shift + 8
 Volume +	 Vol+
 Sleep	 Sleep / Timer
 Volume -	 Vol-
 Mute	 Mute / Dimmer
 Stereo	 1
 Music	 2
 Entertain	 3

Originale	Sostituto
 Movie	 4
 Standard	 5
 Select	 6
 Extd Sur.	 7
 Direct ST	 8
 Speakers A	 9
 Speakers B	 0
 Night	 Guide / EPG / -/-
 Straight	 Fav / Marker / PC
 Title/Level	 Sound / Title
 Up	 Up
 Set Menu	 Menu / Home
 Left/-	 Left
 Enter	 OK
 Right/+	 Right
 Return	 Back / Return
 Down	 Down





Originale	Sostituto
 System Power	 Power
 Standby	 Shift + Power
 CD	 Shift + 3
 MD/CD-R	 Shift + 5
 Tuner	 Shift + 6
 DVD	 Shift + 2
 DTV/CBL	 Shift + 1
 VCR	 Shift + 4
 V-AUX	 Shift + 7
 Multi CH In	 Shift + 8
 Freq/Text	 Red / Netflix / Search
 Sleep	 Sleep / Timer
 EON	 Green / APP / Repeat
 PTY Seek Mode	 Yellow / YouTube / Repeat
 PTY Seek Start	 Blue / Prime Video / Random
 Volume +	 Vol+
 Volume -	 Vol-

Originale	Sostituto
 Mute	 Mute / Dimmer
 1	 1
 2	 2
 3	 3
 4	 4
 5	 5
 6	 6
 7	 7
 8	 8
 9	 9
 0	 0
 ENT	 Fav / Marker / PC
 Title/Level	 Sound / Title
 Up / Preset+	 Up
 Up / Preset+	 >>I / Preset+
 Menu/Set Menu	 Menu / Home
 Left / A/B/C/D/E-	 Left





 



 





 


 



 



 

 
 







Originale	Sostituto
Power AV	AV / Input / RDS
Power	Power
Standby	Shift + Power
CD	Shift + 3
MD/CD-R	Shift + 5
Tuner	Shift + 6
DVD	Shift + 2
DTV/CBL	Shift + 1
VCR	Shift + 4
V-AUX	Shift + 7
Multi CH In	Shift + 8
Disc Skip	Eject / Surround
Sleep	Sleep / Timer
Pause	Pause / Step / Freeze
Audio	Audio / Lang I/II
I<<<	I<<< / Preset-
Play	Play / Slow

Originale	Sostituto
>>I	>>I / Preset+
>>	>> / Tune+
Stop	Stop / Hold
<<<	<<< / Tune-
Vol+	Vol+
Vol-	Vol-
Mute	Mute / Dimmer
1	1
2	2
3	3
4	4
5	5
6	6
7	7
8	8
9	9
0	0





Originale	Sostituto
 System Power	 Power
 Standby	 Shift + Power
 CD	 Shift + 3
 MD/CD-R	 Shift + 5
 Tuner	 Shift + 6
 DVD	 Shift + 2
 DTV/CBL	 Shift + 1
 VCR	 Shift + 4
 V-AUX	 Shift + 7
 Multi CH In	 Shift + 8
 Disc Skip	 Eject / Surround
 Pause	 Pause / Step / Freeze
 I<<	 I<< / Preset-
 Play	 Play / Slow
 >>I	 >>I / Preset+
 <<	 << / Tune-
 Stop	 Stop / Hold

Originale	Sostituto
 >>	 >> / Tune+
 Volume +	 Vol+
 Volume -	 Vol-
 Mute	 Mute / Dimmer
 1	 1
 2	 2
 3	 3
 4	 4
 5	 5
 6	 6
 7	 7
 8	 8
 9	 9
 0	 0
 +10	 Guide / EPG / -/-
 ENT	 Fav / Marker / PC
 Display	 Display / Media

