



Originale	Sostituto
Power On/Off	Power
Display	Info
1	1
2	2
3	3
4	4
5	5
6	6
7	7
8	8
9	9
0	0
CH Enter	Pre Ch
P/CH+	Ch +
P/CH-	Ch -
Muting	Mute

Originale	Sostituto
I-II MTS	Dual
Vol+	Vol +
Vol-	Vol -
Integrator	Smart
Home	Menu
Exit	Exit
Return	Back
Up	Up
Down	Down
Right	Right
Left	Left
Enter/Set	Ok
Red	Red
Green	Green
Yellow	Yellow
Blue	Blue
PC	Media






 

 





 
 


 
 
 


 
 
 









 





 
 



 

 














 

 
 






 
Originale	Sostituto
Input	AV
Ext Input	Shift + AV
TV	TV/R
Split	Shift + 3D
Sub Input	Subt
Swap	Sleep
(PIP) Shift	3D
Drive Off	Shift + Options
Factory	D. Menu
2nd Factory	Text
Set Up/Auto	Options
ID No. SET -	Shift + TV/R
Clear +	Shift + Exit
Power Control	Shift + Power
AV Selection	List
Power Off	Shift + Media
Power On	Shift + Smart

Originale	Sostituto
Zoom/Point	Eject
Zoom-	Shift + Ch -
Zoom+	Shift + Ch +
Freeze	Pause
Size/Screen	Format
Input 1	Shift + 1
Input 2	Shift + 2
Input 3	Shift + 3
Input 4	Shift + 4
Input 5	Shift + 5
Input 6	Shift + 6
Input 7	Shift + 7
Input 8	Shift + 8





Originale	Sostituto	Originale	Sostituto
 Power On/Off	 Power	 I-II MTS	 Dual
 Display	 Info	 Vol+	 Vol +
 1	 1	 Vol-	 Vol -
 2	 2	 Integrator	 Smart
 3	 3	 Home	 Menu
 4	 4	 Exit	 Exit
 5	 5	 Return	 Back
 6	 6	 Up	 Up
 7	 7	 Down	 Down
 8	 8	 Right	 Right
 9	 9	 Left	 Left
 0	 0	 Enter/Set	 Ok
 CH Enter	 Pre Ch	 Red	 Red
 .	 Guide	 Green	 Green
 P/CH+	 Ch +	 Yellow	 Yellow
 P/CH-	 Ch -	 Blue	 Blue
 Muting	 Mute	 PC	 Media

Originale	Sostituto	Originale	Sostituto
 I-II MTS	 Dual	 TV	 DVD
 Vol+	 Vol +	 SAT	 AUX
 Vol-	 Vol -	 PLAY MODE	 REC MODE
 Integrator	 Smart	 FF	 II
 Home	 Menu	 ■	 RR
 Exit	 Exit	 K<<	 <<
 Return	 Back	 >>	 >>>
 Up	 Up	 LIST	 DUAL
 Down	 Down	 SUBT	 OPT
 Right	 Right	 PROG	 SEARCH
 Left	 Left	 PICTURE	 ECO
 Enter/Set	 Ok	 SLEEP	 TV/R
 Red	 Red	 FORMAT	 3D
 Green	 Green	 E-MANUAL	 REPEAT
 Yellow	 Yellow	 ZOOM	 TIMER
 Blue	 Blue	 D.MENU	 TEXT
 PC	 Media	 TOP MENU MENU	 DISPLAY INFO





Originale	Sostituto
Input	AV
Ext Input	Shift + AV
TV	TV/R
Split	Shift + 3D
Sub Input	Subt
Swap	Sleep
(PIP) Shift	3D
Drive Off	Shift + Options
Factory	D. Menu
2nd Factory	Text
Set Up/Auto	Options
ID No.Set -	Shift + TV/R
Clear +	Shift + Exit
Control Power	Shift + Power
AV Selection	List
Power Off	Shift + Media
Power On	Shift + Smart

Originale	Sostituto
Zoom-	Shift + Ch -
Zoom/Point	Eject
Zoom+	Shift + Ch +
Freeze	Pause
Size/Screen	Format
Input 1	Shift + 1
Input 2	Shift + 2
Input 3	Shift + 3
Input 4	Shift + 4
Input 5	Shift + 5
Input 6	Shift + 6
Input 7	Shift + 7
Input 8	Shift + 8

