











 

 
 
 

 










 






 

 





 



















 







Originale		Sostituto		Originale		Sostituto	
	Power		Power		-/--		Shift + Guide / EPG / -/--
	Mute		Mute / Dimmer		Recall		Back / Return
	Aspect		Shift + Picture / Format		Red		Red / Netflix / Search
	P.Mode		Picture / Format		Green		Green / APP / Repeat
	S.Mode		Sound / Title		Yellow		Yellow / YouTube / Repeat
	Audio / Nicam		Audio / Lang I/II		Blue		Blue / Prime Video / Random
	Sleep		Sleep / Timer		Source		AV / Input / RDS
	1		1		Up		Up
	2		2		Menu		Menu / Home
	3		3		Left		Left
	4		4		Enter		OK
	5		5		Right		Right
	6		6		Down		Down
	7		7		Vol +		Vol+
	8		8		Exit		Exit / Cancel / Clear
	9		9		CH +		CH+ / Page+
	0		0		Vol -		Vol-





Originale	Sostituto
Display	Display / Media
CH -	CH- / Page-
TXT	Text / Goto
Index	Setup / OPT /
Hold	Shift + Stop /
Mix	Shift + Text /
Subpage	Eject / Surround
Reveal / Subtitle	Subtitle / EQ
Size	Zoom / Size
Rec / Goto /	Rec / Rec Mode
EPG	Guide / EPG / -/--
List	Smart / List
TV / Radio	TV/Radio /
FAV	Fav / Marker / PC
Play / Pause	Play / Slow
Play / Pause	Shift + Play /
Stop	Stop / Hold

Originale	Sostituto
PVR Menu	D.Menu / Top
Media	Shift + Display / Media
I<<	I<< / Preset-
>>I	>>I / Preset+
<<	<< / Tune-
>>	>> / Tune+

