



 



 

 
 


 
 











 










Originale	Sostituto
 Power	 Power
 Mute	 Mute
 Display	 Info
 Exit	 Exit
 TV / AV	 AV
 SYS	 Smart
 1	 1
 2	 2
 3	 3
 4	 4
 5	 5
 6	 6
 7	 7
 8	 8
 9	 9
 0	 0
 -/--	 Guide

Originale	Sostituto
 Recall	 Pre Ch
 V +	 Vol +
 V -	 Vol -
 P +	 Ch +
 P -	 Ch -
 Up	 Up
 Left	 Left
 Menu	 Menu
 Menu	 Ok
 Right	 Right
 Down	 Down
 SMode	 Format
 PMode	 Shift + Dual
 Sleep	 Sleep
 Nicam	 Dual
 Hold	 Stop
 Index	 Media





Originale	Sostituto
PGUP	SHIFT + + CH Shift + Ch +
SIZE	ZOOM Eject
PGDN	SHIFT + - CH Shift + Ch -
TEXT	REPEAT TEXT Text
REVEAL	SETTINGS OPT Options
SUBPAGE	AD SUBT Subt
RED	A Red
GREEN	B Green
YELLOW	C Yellow
BLUE	D Blue

Originale	Sostituto

