




Originale	Sostituto
 Power	 Power
 Mute	 Mute
 Display	 Info
 Menu	 Menu
 TV / AV	 AV
 SYS	 Smart
 1	 1
 2	 2
 3	 3
 4	 4
 5	 5
 6	 6
 7	 7
 8	 8
 9	 9
 0	 0
 -/--	 Guide

Originale	Sostituto
 Recall	 Pre Ch
 V +	 Vol +
 V -	 Vol -
 P +	 Ch +
 P -	 Ch -
 Up	 Up
 Left	 Left
 Enter	 Ok
 Right	 Right
 Down	 Down
 → S ←	 Dual
 P.P	 Format
 Nicam	 Shift + Dual
 Sleep	 Sleep
 Hold	 Stop
 Index	 Media
 Size	 Eject





Originale	Sostituto	Originale	Sostituto	
PGUP	PGUP	SHIFT +	+	Shift + Ch +
PGDN	PGDN	SHIFT +	-	Shift + Ch -
TEXT	Text	REPEAT TEXT		Text
REVEAL	Reveal	SETTINGS OPT		Options
SUBPAGE	Subpage	AD SUBT		Subt
RED	Red	A		Red
GREEN	Green	B		Green
YELLOW	Yellow	C		Yellow
CYAN	Cyan	D		Blue

Originale	Sostituto

