 









 

 







 



 















 





 

 







Originale		Sostituto		Originale		Sostituto	
	Power		Power		PgUp/> />>		CH+ / Page+
	Source		AV / Input / RDS		4/VGA		4
	e		Smart / List		5/Component		5
	Aspect/Ratio		Picture / Format		6/Video		6
	Resync		Setup / OPT /		PgDn/S.Video		CH- / Page-
	Hide		TV/Radio /		7/SD/USB A		7
	Zoom		Zoom / Size		8/HDMI/DVI		8
	Mute		Mute / Dimmer		9/LAN/WIFI		9
	Freeze		Pause / Step / Freeze		0/USB-B		0
	Left		Left				
	Up		Up				
	Right		Right				
	Menu		Menu / Home				
	Down		Down				
	1/ </<<		1				
	2/Enter/Play/Paus		2				
	3/Back/Stop		3				

