 
 

 

 
 
 


 
 




Originale	Sostituto
 Power	 Power
 HDMI1	 Vol + / Page +
 HDMI2	 - / Stop
 Component	 Comp / Video
 PC	 3D / Invert
 S-Video	 Vol - / Page -
 Default	 Shift + Power
 Video	 Shift + Comp / Video
 Menu	 Menu
 Esc	 Mode
 Up	 Up
 Down	 Down
 Right	 Right
 Left	 Left
 Enter/Line Menu	 Enter
 Memory	 Source
 Aspect	 Eco / Aspect

Originale	Sostituto
 RGBCMY	 Volt / Focus
 Gamma	 Auto
 Color Mode	 Help / Info
 Sharpness	 + / Play
 Pattern	 Freeze / Timer
 Blank	 Blank / Mute

