
 








 



 



Originale	Sostituto
 Mute	 Mute / Dimmer
 Power	 Power
 1	 1
 2	 2
 3	 3
 4	 4
 5	 5
 6	 6
 7	 7
 8	 8
 9	 9
 REC	 Rec / Rec Mode
 0 / AV	 0
 0 / AV	 AV / Input / RDS
 OPT	 Setup / OPT /
 Red / <<	 << / Tune-
 Red / <<	 Red / Netflix / Search

Originale	Sostituto
 Green / Stop	 Stop / Hold
 Green / Stop	 Green / APP / Repeat
 Yellow /	 Play / Slow
 Yellow /	 Yellow / YouTube / Repeat
 Blue / Aspect /	 Picture / Format
 Blue / Aspect /	 Blue / Prime Video / Random
 Blue / Aspect /	 >> / Tune+
 Up	 Up
 Left	 Left
 OK	 OK
 Right	 Right
 Down	 Down
 SFI / EPG	 Guide / EPG / -/-
 Exit / Recall	 Exit / Cancel / Clear
 Exit / Recall	 Back / Return
 Info	 Info / Angle
 Prog +	 CH+ / Page+






Originale		Sostituto	
	TV / Radio		TV/Radio /
	Vol -		Vol-
	Prog -		CH- / Page-
	Menu		Menu / Home
	Vol +		Vol+
	TXT / Mix		Text / Goto
	Still		Pause / Step / Freeze
	PIP		D.Menu / Top
	Sound		Sound / Title
	SAT1		Shift + 2
	SAT2		Shift + 3
	TV		Shift + 1
	Sleep		Sleep / Timer

Originale		Sostituto	






Originale	Sostituto
 Mute	 Mute / Dimmer
 Power	 Power
 1	 1
 2	 2
 3	 3
 4	 4
 5	 5
 6	 6
 7	 7
 8	 8
 9	 9
 REC	 Rec / Rec Mode
 0 / AV	 AV / Input / RDS
 0 / AV	 0
 OPT	 Setup / OPT /
 Red / <<	 << / Tune-
 Red / <<	 Red / Netflix / Search

Originale	Sostituto
 Green / Stop	 Green / APP / Repeat
 Green / Stop	 Stop / Hold
 Yellow /	 Play / Slow
 Yellow /	 Yellow / YouTube / Repeat
 Blue / >> /	 >> / Tune+
 Blue / >> /	 Picture / Format
 Blue / >> /	 Blue / Prime Video / Random
 Up	 Up
 Left	 Left
 OK	 OK
 Right	 Right
 Down	 Down
 SFI / EPG	 Guide / EPG / -/-
 Exit / Recall	 Exit / Cancel / Clear
 Exit / Recall	 Back / Return
 Info	 Info / Angle
 Prog +	 CH+ / Page+





**Originale**
**Sostituto**

	TV / Radio		TV/Radio /
	Vol -		Vol-
	Prog -		CH- / Page-
	Menu		Menu / Home
	Vol +		Vol+
	TXT / Mix		Text / Goto
	Still		Pause / Step / Freeze
	PIP		D.Menu / Top
	Sound		Sound / Title
	SAT1		Shift + 2
	SAT2		Shift + 3
	TV		Shift + 1
	Sleep		Sleep / Timer

**Originale**
**Sostituto**






Originale	Sostituto
 Mute	 Mute / Dimmer
 Power	 Power
 1	 1
 2	 2
 3	 3
 4	 4
 5	 5
 6	 6
 7	 7
 8	 8
 9	 9
 REC	 Rec / Rec Mode
 0 / AV	 AV / Input / RDS
 0 / AV	 0
 OPT	 Setup / OPT /
 Red / <<	 Red / Netflix / Search
 Red / <<	 << / Tune-

Originale	Sostituto
 Green / Stop	 Green / APP / Repeat
 Green / Stop	 Stop / Hold
 Yellow /	 Play / Slow
 Yellow /	 Yellow / YouTube / Repeat
 Blue / >> /	 Blue / Prime Video / Random
 Blue / >> /	 Picture / Format
 Blue / >> /	 >> / Tune+
 Up	 Up
 Left	 Left
 OK	 OK
 Right	 Right
 Down	 Down
 SFI / EPG	 Guide / EPG / -/-
 Exit / Recall	 Exit / Cancel / Clear
 Exit / Recall	 Back / Return
 Info	 Info / Angle
 Prog +	 CH+ / Page+





Originale	Sostituto
TV RADIO	PROGRAM TV/RADIO
+	VOL -
-	CH PAGE
MENU	HOME MENU
-	VOL +
TXT	GOTO TEXT
STILL	STEP-FREEZE
PIP	TOP MENU D.MENU
SOUND	TITLE SOUND
SAT1	SHIFT + DVD 2
SAT2	SHIFT + CD-STB 3
TV	SHIFT + TV 1
SLEEP	TIMER SLEEP

Originale	Sostituto

