 



 















































 


 






 
 








Originale		Sostituto		Originale		Sostituto	
	Input		AV / Input / RDS		Menu/Exit		Menu / Home
	Mute		Mute / Dimmer		Vol+		Vol+
	Power		Power		Up		Up
	1		1		CH+		CH+ / Page+
	2		2		Vol-		Vol-
	3		3		Left		Left
	4		4		OK		OK
	5		5		Right		Right
	6		6		CH-		CH- / Page-
	7		7		Down		Down
	8		8		FAV		Fav / Marker / PC
	9		9		CH List		Smart / List
	EPG		Guide / EPG / -/--		I/II		Shift + Audio / Lang I/II
	0		0		Sleep		Sleep / Timer
	Recall		Back / Return		USB		Shift + 8
	[+]		Display / Media		Audio		Audio / Lang I/II
	Menu/Exit		Exit / Cancel / Clear		Video		Shift + 4



