
 

 

 
 


 
 

 
 
 
 
 
 

 
 
 


 




Originale	Sostituto	Originale	Sostituto
 Power	 Power	 Options	 Options
 Input	 AV	 Home	 Smart
 Sync Menu	 Menu	 Up	 Up
 I<<	 I<<	 Down	 Down
 Pause	 Pause	 Right	 Right
 Stop	 Stop	 Left	 Left
 >>I	 >>I	 OK	 Ok
 <<	 <<	 Digital/Analog	 Media
 Play	 Play	 [+]	 3D
 >>	 >>	 Scene	 TV/R
 Red	 Red	 Audio	 Dual
 Green	 Green	 1	 1
 Yellow	 Yellow	 2	 2
 Blue	 Blue	 3	 3
 Guide	 Guide	 4	 4
 [i+]/[?]	 Info	 5	 5
 Return	 Back	 6	 6





	Originale	Sostituto		Originale	Sostituto
	7		7		
	8		8		
	9		9		
	0		0		
	[≡]		Text		
	[...]		Subt		
	Vol+		Vol +		
	Vol-		Vol -		
	Mute		Mute		
	CH/Prog+		Ch +		
	CH/Prog-		Ch -		
	Recall		Pre Ch		

	Originale	Sostituto		Originale	Sostituto

