
 
 




 


 

 









Originale	Sostituto
 Source / Eject	 Shift + AV / Input / RDS
 Power	 Power
 List	 Smart / List
 TV	 Shift + 1
 BD/DVD/VOD	 Shift + 2
 1	 1
 2	 2
 3	 3
 4	 4
 5	 5
 6	 6
 7	 7
 8	 8
 9	 9
 AV	 AV / Input / RDS
 0 / --	 0
 FAV	 Fav / Marker / PC

Originale	Sostituto
 Exit	 Exit / Cancel / Clear
 Menu	 Menu / Home
 Up	 Up
 Left	 Left
 OK	 OK
 Right	 Right
 Down	 Down
 Guide	 Guide / EPG / -/-
 Return	 Back / Return
 Info	 Info / Angle
 Vol +	 Vol+
 ECO	 TV/Radio /
 PR +	 CH+ / Page+
 Vol -	 Vol-
 Mute	 Mute / Dimmer
 PR -	 CH- / Page-
 Red / A-B	 Red / Netflix / Search





Originale	Sostituto
 Source / Eject	 Shift + AV / Input / RDS
 Source / Eject	 Eject / Surround
 Power	 Power
 List	 Smart / List
 TV	 Shift + 1
 BD/DVD/VOD	 Shift + 2
 1	 1
 2	 2
 3	 3
 4	 4
 5	 5
 6	 6
 7	 7
 8	 8
 9	 9
 AV	 AV / Input / RDS
 0 / --	 0

Originale	Sostituto
 FAV	 Fav / Marker / PC
 Exit	 Exit / Cancel / Clear
 Menu	 Menu / Home
 Up	 Up
 Left	 Left
 OK	 OK
 Right	 Right
 Down	 Down
 Guide	 Guide / EPG / -/-
 Return	 Back / Return
 Info	 Info / Angle
 Vol +	 Vol+
 ECO	 TV/Radio /
 PR +	 CH+ / Page+
 Vol -	 Vol-
 Mute	 Mute / Dimmer
 PR -	 CH- / Page-



