
 

 
 
 
 
 
 
 

 
 









Originale		Sostituto		Originale		Sostituto	
	Power		Power		<<		<<
	Bonusview		Media		>>		>>
	Open / Close		Eject		Stop		Stop
	1		1		Play		Play
	2		2		Pause		Pause
	3		3		Disc Menu		D. Menu
	4		4		Menu		Menu
	5		5		Popup / Title		Shift + Menu
	6		6		Popup / Title		List
	7		7		Tools		Options
	8		8		Info		Info
	9		9		Up		Up
	0		0		Left		Left
	Subtitle		Subt		Enter		Ok
	Audio		Dual		Right		Right
	I<<		I<<		Down		Down
	>>I		>>I		Return		Back





Originale		Sostituto		Originale	Sostituto
	Exit		Exit		
	Red		Red		
	Green		Green		
	Yellow		Yellow		
	Blue		Blue		
	Smart HUB		Smart		
	Search		TV/R		
	Repeat		Text		
	TV Power		Shift + Power		
	TV Source		AV		
	TV Vol +		Vol +		
	TV Vol -		Vol -		
	TV Mute		Mute		
	TV CH +		Ch +		
	TV CH -		Ch -		

