



Originale	Sostituto
	 Power
	 Mute
	 List
	 Media
	 Smart
	 Shift + TV/R
	 Exit
	 Menu
	 Info
	 Vol +
	 Vol -
	 Up
	 Left
	 Ok
	 Right
	 Down
	 Ch +

Originale	Sostituto
	 Ch -
	 Stop
	
	 Pause
	 Play
	
	 Rec
	 Red
	 Green
	 Yellow
	 Blue
	
	 Back
	 TV/R
	 Text
	
	 1





Originale		Sostituto	
	2		2
	3		3
	4		4
	5		5
	6		6
	7		7
	8		8
	9		9
	0		0
	GUIA /		Guide
	* / AV		AV
	# / -/--		Shift + Guide

Originale		Sostituto	

