

 

 
 

 

 




 



 

 
 

 








 



 
 


























Originale	Sostituto
 D.Menu	 D.Menu / Top
 Power	 Power
 Open / Close	 Eject / Surround
 Info	 Info / Angle
 P.Mode	 Picture / Format
 S.Mode	 Sound / Title
 Sleep	 Sleep / Timer
 Audio I/II	 Audio / Lang I/II
 Subtitle	 Subtitle / EQ
 CH. List	 Smart / List
 Screen	 TV/Radio /
 1	 1
 2	 2
 3	 3
 4	 4
 5	 5
 6	 6

Originale	Sostituto
 7	 7
 8	 8
 9	 9
 Source	 AV / Input / RDS
 0	 0
 Q.View	 Shift + Menu /
 Mute	 Mute / Dimmer
 Guide	 Guide / EPG / -/-
 Vol +	 Vol+
 P+	 CH+ / Page+
 Vol -	 Vol-
 P -	 CH- / Page-
 Menu	 Menu / Home
 FAV	 Fav / Marker / PC
 Up	 Up
 Left	 Left
 OK	 OK





Originale	Sostituto
	Right
	Down
	Exit / Cancel / Clear
	Rec / Rec Mode
	Back / Return
	Play / Slow
	Pause / Step / Freeze
	Stop / Hold
	Shift + Red / Red / Netflix / Search
	Red / Netflix / Search
	Shift + Green / Green / APP / Repeat
	Green / APP / Repeat
	Shift + Yellow / Yellow / YouTube / Repeat
	Yellow / YouTube / Repeat
	Blue / Prime Video / Random
	Shift + Blue / Blue / Prime
	Setup / OPT /

Originale	Sostituto
	Shift + Setup / OPT / Tools
	Shift + Sound / Title
	Text / Goto
	Shift + Text /
	Shift + 9
	Shift + 0
	Shift + Guide / EPG / --
	Shift + Fav / Marker / PC
	Shift + TV/Radio / Program
	Shift + Sleep / Timer
	Shift + D.Menu / Top Menu

