



Originale	Sostituto
Power	Power
Power Tv	Shift + Power
Vol+ Tv	Vol+
AV/Input Tv	AV / Input / RDS
Vol- Tv	Vol-
1	1
2	2
3	3
Open/Close	Eject / Surround
4	4
5	5
6	6
PIP	Picture / Format
7	7
8	8
9	9
Audio/Secondar	Sound / Title

Originale	Sostituto
Cancel	Shift + Exit / Cancel / Clear
0	0
Audio	Audio / Lang I/II
Internet	Smart / List
<< Search	<< / Tune-
Play	Play / Slow
>> Search	>> / Tune+
I<</Skip	I<< / Preset-
Pause	Pause / Step / Freeze
>>I/Skip	>>I / Preset+
Status	Info / Angle
Stop	Stop / Hold
Exit	Exit / Cancel / Clear
Pop-Up Menu	Display / Media
Top Menu	D.Menu / Top
Up	Up
Home	Menu / Home





Originale	Sostituto
Left	Left
OK	OK
Right/II>	Right
Option	OPT-TOOLS SETUP Setup / OPT /
Down	Down
Return	RETURN BACK Back / Return
Red	NETFLIX SEARCH Red / Netflix / Search
Green	APP REPEAT Green / APP / Repeat
Yellow	YouTube REPEAT A-B Yellow / YouTube / Repeat
Blue	Prime Video RANDOM Blue / Prime Video / Random

Originale	Sostituto

