



Originale	Sostituto	Originale	Sostituto
	Power		Power
	[i+]/Info		Info
	[+]/Search		TV/R
	[..≡]/Title		Options
	DVD Menu		D. Menu
	[*]/Mark		Media
	[--]/A-B		Dual
	[+]/Zoom		Eject
	[?]/Clear		Exit
	<<Fast		<<
	>>Fast		>>
	<<Skip		I<<
	>>Skip		>>I
	Stop/Eject		Stop
	Pause/Play		Play
	Menu		Menu
	Enter		Ok

Originale	Sostituto	Originale	Sostituto
	Vol+		Vol +
	Vol-		Vol -
	Mute		Mute
	PR+		Ch +
	PR-		Ch -
	Up		Up
	Down		Down
	Right		Right
	Left		Left
	Red/Audio I-II		Red
	Green/Repeat		Green
	Yellow/Angle		Yellow
	Blue/Sub		Blue
	1		1
	2		2
	3		3
	4		4





Originale	Sostituto	Originale	Sostituto
5	5	5	5
6	6	6	6
7	7	7	7
8	8	8	8
9	9	9	9
0	0	0	0
AV	AV	TIMER AV	AV
16:9	16:9	PICTURE FORMAT	Format

Originale	Sostituto

