




 






 




 
 
 
 





 
 

 
 






Originale		Sostituto		Originale		Sostituto	
	Standby		Power		Down		Down
	Info		Info		Right		Right
	Subtitle		Subt		Left		Left
	Mute		Mute		OK		Ok
	I<<		I<<		Vol+		Vol +
	>>I		>>I		Vol-		Vol -
	Play		Play		1		1
	Pause		Pause		2		2
	<<		<<		3		3
	>>		>>		4		4
	Menu		Menu		5		5
	Exit		Exit		6		6
	Rec		Rec		7		7
	Stop		Stop		8		8
	CH+		Ch +		9		9
	CH-		Ch -		0		0
	Up		Up		EPG		Guide






Originale		Sostituto		Originale		Sostituto	
	Back		Back				
	Media		Media				
	USB		Smart				
	Tv/Radio		TV/R				
	Audio		Dual				
	TTX		Text				
	Timer		AV				
	FAV		Pre Ch				
	Res		3D				
	Red		Red				
	Green		Green				
	Yellow		Yellow				
	Blue		Blue				





Originale	Sostituto
 Standby	 Power
 Info	 Info
 Subtitle	 Subt
 Mute	 Mute
 I<<	 I<<
 >>I	 >>I
 <<	 <<
 >>	 >>
 Play	 Play
 Pause	 Pause
 Record	 Rec
 Stop	 Stop
 Menu	 Menu
 Exit	 Exit
 CH+	 Ch +
 CH-	 Ch -
 Up	 Up

Originale	Sostituto
 Down	 Down
 Right	 Right
 Left	 Left
 OK	 Ok
 Vol+	 Vol +
 Vol-	 Vol -
 EPG	 Smart
 Back	 Back
 1	 1
 2	 2
 3	 3
 4	 4
 5	 5
 6	 6
 7	 7
 8	 8
 9	 9





Originale		Sostituto		Originale		Sostituto	
0	0	0	0				
MEDIA	Media	APP MEDIA	Media				
USB	USB	SETTINGS OPT	Options				
TV/RADIO	Tv/Radio	SEARCH TV/R	TV/R				
AUDIO	Audio	SOUND DUAL	Dual				
TTX	TTX	REPEAT TEXT	Text				
FAV	FAV	FAV PRE-CH	Pre Ch				
TIMER	Timer	TIMER AV	AV				
RES	Res	- / - GUIDE	Guide				
	Red		Red				
	Green		Green				
	Yellow		Yellow				
	Blue		Blue				

