



Originale	Sostituto	Originale	Sostituto
Power	Power	Group/Title Skip >>I	Ch +
Sleep/A.Stby	Sleep	Stop/PTY	Stop
Clock/Timer	AV	Repeat	Text
Scan Mode	Green	Top Menu/PG	Shift + Menu
Display	Info	Menu/PL	Menu
Picture/Adjust	Format	Tuner/Play	3D
Dimmer	Smart	Vol+	Vol +
Play/Pause	Play	Vol-	Vol -
Play/Pause USB	Pause	Fade Muting	Mute
Play/Pause SD	Media	←	Shift + Pre Ch
Tuner	TV/R	Return	Back
Audio In	Dual	On Screen	Shift + Info
<</Slow-	<<	Set Up	Options
>>/Slow+	>>	Up	Up
I<<	I<<	Down	Down
I<< Group/Title Skip	Ch -	Right	Right
>>I	>>I	Enter/Set	Ok





Originale		Sostituto		Originale		Sostituto	
	Left		Left		9		9
	Audio/MPX		Red		0		0
	Subtitle		Subt		10		Guide
	Zoom		Eject		+10		Pre Ch
	Sound Mode		List		Angle		Shift + 5
	Surround		Shift + Dual		Time Search		Shift + 6
	C.Voice		Yellow		DVD Level		Shift + 7
	S.Turbo II		Blue		Audio In Level		Shift + 8
	HBS		Shift + Smart		Repeat A-B		Shift + Text
	1		1		Resume		D. Menu
	2		2		Cancel		Exit
	3		3		File Type		Shift + Media
	4		4				
	5		5				
	6		6				
	7		7				
	8		8				

