



 

 

 

 

 

 

 

 

 

 







 

 



 





Originale	Sostituto
 Standby / On	 Power
 Input Select	 AV / Input / RDS
 HDMI	 Shift + 0
 Eject	 Eject / Surround
 1	 1
 2	 2
 3	 3
 Prog +	 CH+ / Page+
 4	 4
 5	 5
 6	 6
 Prog -	 CH- / Page-
 7	 7
 8	 8
 9	 9
 Time Shift	 Zoom / Size
 Sat Link	 TV/Radio /

Originale	Sostituto
 0	 0
 Clear	 Exit / Cancel / Clear
 [i+]	 Info / Angle
 Text	 Text / Goto
 Audio	 Audio / Lang I/II
 Subtitle	 Subtitle / EQ
 Guide	 Guide / EPG / -/-
 Top Menu	 D.Menu / Top
 Up	 Up
 Menu / List	 Menu / Home
 Left	 Left
 Enter / OK	 OK
 Right	 Right
 Display	 Display / Media
 Down	 Down
 Return / Back	 Back / Return
 Red	 Red / Netflix / Search





Originale	Sostituto
Green	Green / APP / Repeat
Yellow / System	Yellow / YouTube / Repeat
Blue / Search	Shift + Blue / Prime / Random
Blue / Search	Blue / Prime Video / Random
<< REV	<< / Tune-
Play	Play / Slow
>> FWD	>> / Tune+
I<< Skip	I<< / Preset-
Stop	Stop / Hold
Skip >>I	>>I / Preset+
Pause	Pause / Step / Freeze
VCR	Shift + 4
DVD	Shift + 2
CM Skip	Sound / Title
Dubbing	Picture / Format
Rec	Rec / Rec Mode
Rec Speed	Shift + Rec / Rec Mode

Originale	Sostituto
Setup	Setup / OPT /
Timer Set	Sleep / Timer
Timer Prog	Shift + Sleep / Timer
1.3x / 0.8x Play	Smart / List

