



| Originale | Sostituto |
|---|---|
|  Vol + |  Vol+ |
|  P+ |  CH+ / Page+ |
|  Vol - |  Vol- |
|  Power |  Power |
|  P- |  CH- / Page- |
|  Mute |  Mute / Dimmer |
|  1 |  1 |
|  2 |  2 |
|  3 |  3 |
|  4 |  4 |
|  5 |  5 |
|  6 |  6 |
|  7 |  7 |
|  8 |  8 |
|  9 |  9 |
|  PP |  Back / Return |
|  PP |  Fav / Marker / PC |

| Originale | Sostituto |
|---|---|
|  0 |  0 |
|  Display [+] |  Display / Media |
|  [≡] |  Text / Goto |
|  □ |  Stop / Hold |
|  ? |  Smart / List |
|  ↕ |  Zoom / Size |
|  - / ψ |  I<< / Preset- |
|  - / ψ |  Left |
|  Menu |  Menu / Home |
|  Menu |  OK |
|  + / >>I |  >>I / Preset+ |
|  + / >>I |  Right |
|  ◇◇ / I-II |  Audio / Lang I/II |
|  ◇◇ / I-II |  Setup / OPT / |
| | |
| | |
| | |

